

SPYPOINT



LINK-MICRO-LTE QUICKSTART GUIDE

V.1.2

IN THE BOX

- 1x LINK-MICRO-LTE camera
- 1x Antenna holder
- 1x Installation strap
- 1x Quickstart guide
- 1x SIM card that is preactivated and inserted in the camera

NOTE:

Memory card and batteries are sold separately.

User manual, latest firmware, and FAQ available at:


support.spypoint.com

COMPONENTS

- 1 Antenna
- 2 Detection lens
- 3 MicroSD card slot
- 4 Light sensor
- 5 Delay light
- 6 Photo lens
- 7 LED
- 8 ON/OFF switch
- 9 "STATUS" light
- 10 SIM card slot
- 11 Battery compartment
- 12 Battery holder
- 13 Slot for installation strap
- 14 Locking latch
- 15 Cable lock hole
- 16 12V jack
- 17 Standard ¼"-20 tripod mount



- 1. Power camera ON
 - 2. Status light
Flashing green
→ Searching for signal
 - 3. Status light Steady
Red → No signal
Orange → Fair signal
Green → Good signal
 - 4. Upper light
Flashing red (10s)
→ Preparation delay
 - 5. All lights OFF
→ Camera ready
 - 6. Two separate red 5s
→ Frontal camera
- More information:
Help menu in
SPYPOINT APP

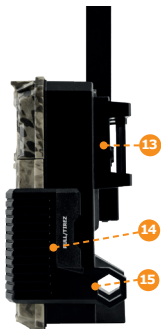

GETTING STARTED

SELECT A POWER SOURCE

- **Lithium or alkaline AA batteries**
- **12V rechargeable battery (#KIT-12V)**
- **3.7V rechargeable battery pack (#LIT-10)**

NOTE:

We recommend using the SPYPOINT #LIT-10 rechargeable lithium battery pack, sold separately.

FOR BEST RESULTS AND NO LEAKAGE:

- Use only new lithium or alkaline batteries.
- Do not mix old and new batteries.
- Do not use rechargeable AA batteries (their lower voltage can generate operational issues).

HOW TO INSTALL AA BATTERIES PROPERLY

- Unlock and open the LINK-MICRO-LTE door.
- Take the battery holder out.
- Insert the AA batteries into the battery holder following polarity (+) and (-) indications.
- Place the battery holder back into the battery compartment.

FORMATTING YOUR MICROSD CARD

Before inserting the MicroSD card into your camera, it must be reformatted via a computer to ensure proper functionality.

Memory card is sold separately. Whether you choose to use a MicroSD card you previously used in another device or a brand new one you've just bought, its capacity must not exceed 32 GB and it must be reformatted. Do not use the "Quick format" option.

INSERTING A MICROSD CARD

- Ensure the camera is turned off.
- Insert a MicroSD memory card (up to 32 GB capacity) into the MicroSD card slot with the label facing up.
- The card is inserted correctly when a click is heard.


ACTIVATING YOUR CAMERA



You must activate your camera through the free "SPYPOINT app" or by logging on to the SPYPOINT.COM website.

FINDING THE ACTIVATION CODE

The activation code is located inside the camera's battery compartment behind the battery holder. You will need this unique code to activate the LINK-MICRO-LTE.

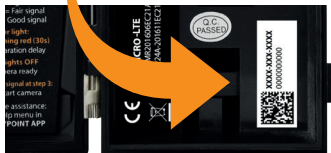

SPYPOINT APP

Follow these steps:

1. On Google Play™ or the App Store™, search for "SPYPOINT app".
2. Download and install the app on your smartphone or tablet.
3. Start the app. Select "ACTIVATE A DEVICE". In the list, select "LINK-MICRO-LTE" then follow the steps.
4. When complete, a confirmation email will be sent to you with instructions on how to finalize the creation of your account will be sent to you.
5. Log in to the SPYPOINT app using your email and password.

ACTIVATING YOUR CAMERA



SPYPOINT website

Follow these steps:

1. On the SPYPOINT website, select "LOGIN" in the top navigation menu. On the displayed page, select "Register," fill out the required fields, then log in.
2. Select the + sign on the far right of the page; in the list, select "LINK-MICRO-LTE," then follow the steps.
3. When complete, a confirmation email will be sent to you with instructions on how to finalize the creation of your account will be sent to you.
4. On the website, log in using your email and password.

NOTE:

You can activate additional cameras and switch between them in the SPYPOINT app or the "MY ACCOUNT" section of the SPYPOINT website.

CHOOSING A PHOTO TRANSMISSION PLAN FOR YOUR CAMERA

Go to

<https://www.spypoint.com/en/spy-point-experience/plans>
to read the latest offers and choose the plan that suits you.

CONFIGURING YOUR CAMERA

Both the SPYPOINT app and website let you configure all the camera settings remotely. They also provide basic information on your camera – such as: cellular signal strength, battery level, and MicroSD card space used. This information is based upon the latest connection with your camera.

New settings take effect every time the camera connects with the SPYPOINT app or website. Below are the most basic settings you will configure.

BASIC PHOTO SETTINGS

Delay: Allows you to set the time interval between each detection before the camera takes the next photo.

Multishot: Allows you to set the number of photos per detection (up to 2) with a 5-second delay between each photo.

Sensitivity: Allows you to set the detection sensitivity of the camera.

Camera name: Allows you to name each owned camera

CELLULAR SETUP

First transfer time: Allows you to choose the time when the camera makes its first transfer of the day.

Transfer frequency: Allows you to choose the number of daily transfers.

ADVANCED OPTIONS/CONFIGURATION

Schedule: Allows you to set the period of operation for each day of the week. For a 24-hour operation mode, both the start and stop times must be 12 AM.

NOTE:

Camera transfers are set by default to every 4 hours from midnight.

STARTING YOUR CAMERA

1. Turn on the camera.
2. The green "STATUS" light will flash while searching for a signal (can take a few minutes).
3. The "STATUS" light will light up in one of the following 3 colors:
 - **Red:** Insufficient signal.
 - **Orange:** Acceptable signal.
 - **Green:** Optimal signal.
4. When the top right light flashes red, 30 seconds remain before the photo mode is turned on. This allows you to leave the area without being photographed.
5. The camera is ready for use when all the lights turn off.
6. If the light is red during step 3, you should:
 - Turn your camera off and then back on.
 - Retry while pointing the antenna at different angles.
 - Try moving it to a spot with better signal.
 - Try our #CA-01 long-range cellular antenna (sold separately), which could help improve signal strength.

INSTALLING YOUR CAMERA



1. Mount the camera using the installation strap.
2. The camera should be at the same height as the animal's mid-body.
3. The targeted animal should be at 25 feet/7.5 meters away from the camera.
4. For brighter pictures at night, ensure you have elements in the background to reflect the IR flash.

DISPOSAL

ONLY USE ORIGINAL SPARE PARTS AND ACCESSORIES.

If one day your camera has been used so intensively that it has to be replaced, or if you no longer have any use for it, you are obliged to dispose of it at a recycling center.

Information on return points for your electrical appliance can be obtained from your local waste disposal company or from your local administrative offices.

Electrical appliances not only contain valuable recyclable raw materials, but also substances which, if disposed of improperly, can affect public health and the environment. Help ensure that valuable raw materials are recycled when you return your old appliance to a central collection point.

The WEEE (Waste Electrical and Electronic Equipment Directive) symbol represents the obligation that the labeled camera to be sent to a separate center for the proper recycling of electrical and electronic equipment.



FREQUENCY

FREQUENCY RANGE:

800/ 850/ 900/ 1900/ 2100MHz

MAXIMUM TRANSMISSION POWER:

<i>FREQUENCY</i>	<i>MAX.</i>
GSM850	33DBM±2DB
EGSM900	33DBM±2DB
DCS1800	30DBM±2DB
PCS1900	30DBM±2DB
GSM850 (8-PSK)	27DBM±3DB
EGSM900 (8-PSK)	27DBM±3DB
DCS1800 (8-PSK)	26DBM±3DB
PCS1900 (8-PSK)	26DBM±3DB
UMTS 2100	24DBM+1.7/-3.7DB
UMTS 1900	24DBM+1.7/-3.7DB
UMTS 900	24DBM+1.7/-3.7DB
UMTS 850	24DBM+1.7/-3.7DB
UMTS 800	24DBM+1.7/-3.7DB

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.



Operation is subject to the following two conditions:

1. This device must not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.



For a complete list of specifications, features, and settings, visit our **LINK-MICRO-LTE** page at

WWW.SPYPOINT.COM.

THANK YOU FOR CHOOSING



FAQ, user manual & latest
firmware available at:
SUPPORT.SPYPOINT.COM



Live chat support at
www.spypoint.com



service@spypoint.com

JOIN THE COMMUNITY



Sit back and relax as this device is covered by the "Know you're covered" 2-year warranty. We strive to provide our customers with a positive experience and an outstanding service.